

Classic skohylla

Classic skohylla, enkel	Classic skohylla, dubbel
1 hyllplan	2 hyllplan
2 konsoler	2 konsoler
4 ändplugg	4 ändplugg
2 väggbrickor	2 väggbrickor
8 skruvar	8 skruvar

Monteringsanvisning:

- 1 Tryck i ändpluggen i konsolerna.
- 2 Montera underhyllplanet. Använd bifogad skruv.
- 3 Montera överhyllplanet. Använd bifogad skruv.
- 4 Fäst väggbrickorna på baksidan av konsolerna.

OBS! Skruv för uppsättning på väggen medföljer inte. Rådgör fackman vilken modell av skruv och eventuell plugg som fordras för er vägg.

Classic Shoe Rack

Classic shoe rack, single	Classic shoe rack, double
1 shelf	2 shelves
2 consoles	2 consoles
4 end plugs	4 end plugs
2 wall pieces	2 wall pieces
8 screws	8 screws


Assembly instructions

- 1 Press the end plugs into the consoles.
- 2 Mount the bottom shelf. Use enclosed screws.
- 3 Mount the top shelf. Use enclosed screws.
- 4 Attach the plastic wall pieces on the back of the consoles.

Please note! Screws for fixing to wall are not included but can be purchased through us. For advice on suitable screws and plugs, contact your specialized dealer



Classic Shoe Rack, single

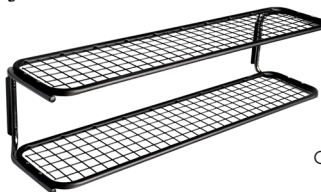

Classic Shoe Rack, double

**Essem
Design**

+46(0) 371 194 10
info@essem.se
www.essem.se