

# Essem Design

## Stativset dubbel Nostalgi klädställ påbyggnad


Tillbehör till Nostalgi hatt- & skohylla för att få ett fristående dubbelsidigt klädställ

### Innehåll:

1 st. T-stativ, 2 st. stag, 1 st. beslagspåse (2 st. ställfötter, 3 st. 30x40 ändplugg, 2 st. gängstång M10x60 mm, 1 st. insexnyckel, 8 st. M6 skruv, 8 st. skruvhattbricka och 8 st. skruvhatt)

### Monteringsanvisning: (se även bild nedan)

1. Två personer för att montera rekommenderas. Verktyg som behövs är stjärnskruvmejsel och liten spårskruvmejsel. Testskruva alla gängor försiktigt innan montage.
2. Montera ställfötter och 30x40 ändplugg på T-stativet.
3. Läggt ditt gängstänger centrerat, två hål uppe och nere
4. Montera stagen från grundpaketet och påbyggnadspaketet med gängstången. Tänk på att skruva ditt båda sidor först och sedan dra åt båda sidor samtidigt.
5. Gå tillbaka till anvisningen för grundpaketet.

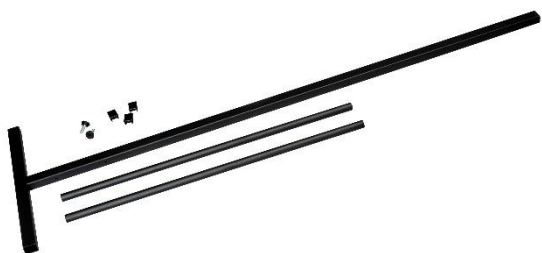

## Set of stands double extension – Nostalg coat stand

Accessories for the Nostalg hat and shoe rack to make a free-standing double-sided coat stand.

### Contents:

1 X T-upright, 2 X horizontal braces, bag of fittings (2 X feet, 3 X 30x40 end plugs, 4 X cover caps, 4 X M10 bolts , 1 X hex key, 16 X M6 bolts, 16 X bolt head cover washers and 16 bolt head covers)

### Assembly instructions: (see also image below)

1. We recommend assembly is a two-person job. Tools required: a crosshead screwdriver and a small slotted screwdriver. Carefully test screw in all bolts before assembly.
2. Attach the feet and 30x40 end plugs to the upright. If you have bought floor fixings, please see attached instructions.
3. If additional accessories are included, please see attached instructions for these. Otherwise jump to next step.
4. Affix the upper and lower braces between the left and right uprights with the M10 bolts and hex key. Do not fully tighten the bolts until everything has been assembled. The large holes in the uprights should face outwards.
5. If a trellis set is included, please see attached instructions for these. Otherwise jump to next step.
6. Open the Nostalg packaging and mount the brackets onto the frame with the M6 bolts and head cover washers. Do not forget the head covers for the concealed bolts.
7. Insert the anchor hooks on the round bars into the desired positions. You do not need to tighten them yet. Insert the round bars between the brackets.
8. Fully tighten the braces. Tighten both sides to ensure it is not crooked. Press the cover caps into place.
9. Tighten the adjustment screws on the brackets and anchor bolts.