


## Nostalgi klädställ

# SV

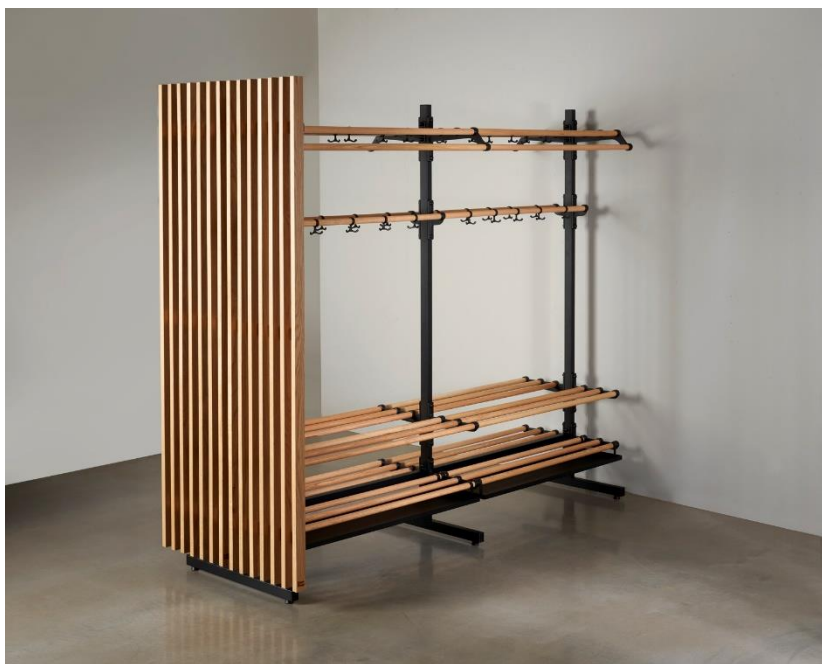

### Inkluderat i förpackningen\*







\*Hyllor, kroklister mm. behöver köpas till för att få ett komplett klädställ.

Dubbelsidigt - grund	Dubbelsidigt - påbyggnad	Enkelsidigt - grund	Enkelsidigt - påbyggnad	Spaljé – dubbel	Spaljé – enkelt
2 T-stativ	1 T-stativ	2 L-stativ	1 L-stativ	2 träspaljé	1 träspaljé
2 stag	2 stag	2 stag	2 stag	2 dubbelfäste	2 enkelfäste
4 ställfötter	2 ställfötter	4 ställfötter	2 ställfötter	4 M8x50 skruv	4 M8x50 skruv
6 plugg 30x40	3 plugg 30x40	6 plugg 30x40	3 plugg 30x40	12 träskruv	6 träskruv
32 M6 skruv	16 M6 skruv	16 M6 skruv	8 M6 skruv		
32 skruvbricka	16 skruvbricka	16 skruvbricka	8 skruvbricka		
32 skruvhatt	16 skruvhatt	16 skruvhatt	8 skruvhatt		
24 blindpropp	12 blindpropp	12 blindpropp	6 blindpropp		
16 mutterskydd	8 mutterskydd	16 mutterskydd	8 mutterskydd		
8 M8x45 skruv	4 M8x50 skruv	8 M8x45 skruv	4 M8x50 skruv		
8 M8 låsmutter	4 M8 låsmutter	8 M8 låsmutter	4 M8 låsmutter		
		4 golvfästen	2 golvfästen		

## Monteringsanvisning


Det behövs två personer för att montera denna produkt. Montera ställningen från vänster till höger.

Verktyg som behövs: Skruvdragare/mejsel, stjärn- och torxbits, monteringshammare och 2 blocknyckel 13"

1	Slå i 30x40 pluggen i stativens ändrar samt skruva i ställfötterna. Har du golvfästen se instruktion för detta.	
2	Har du spaljé, lägg träspaljén på golvet och skruva dit fästena med träskruven i de fördefinierade hålen på träspaljén. Fästena är vändbara och fungerar åt båda hållen.	
3	Montera spaljé med ett stativ och stagen. Sätt M8 skruvarna från utsidan genom spaljéfästet, stativ och stag. Börja med det nedre staget. Muttern ska sitta på insidan av klädstället. Bortse från spaljé om detta inte ingår i er lösning.	
4	Fortsätt med stativen och stagen till önskad längd. Om klädstället även ska avsluta med spaljé, montera den på samma sätt som första.	
5	Öppna upp förpackningarna för tillköpta Nostalgi hatt-/skohylla eller Kroklist eller 291 hatthylla. Börja montera <b>vänster</b> konsolerna för produkterna på stativen med skruvbricka och M6 skruv. Den skålade ytan på skruvbrickan ska vara emot skruvhuvudet. Glöm inte skruvhatten för dold skruv. Trä på ankarkroken på valfri rundstav och sätt ditt rundstaven i första konsolen.	
6	Anpassa nästa konsol genom att trä in rundstavarna i konsolen och sedan fäst konsolen på nästa stativ enligt punkt 5. Om nästa är en mellankonsol ska rundstavarna mötas i mitten.	
7	Efterdra skruv och mutter som fäster stagen ordentligt. Täck både skruvskalle och mutter med mutterskydd. Tryck ditt blindproppar för de hål som inte har konsoler.	
8	Skruva ditt stoppskruvarna ordentligt för konsoler och ankarkrokar tillhörande hyllor och kroklist.	

## Nostalg coat stand

# EN

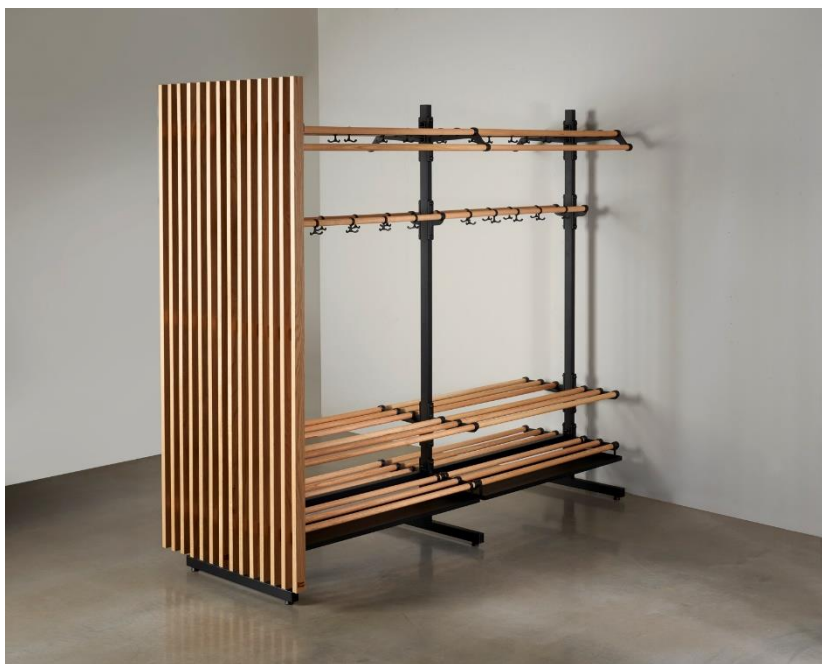

### Included in the package\*







\*Racks, hook strips etc. needs to be purchased to get a complete coat stand.

Double sided - basic	Double sided - extension	Single sided - basic	Single sided - extension	Trellis – double	Trellis – single
2 T-stand	1 T-stand	2 L-stand	1 L-stand	2 trellis	1 trellis
2 metal braces	2 metal braces	2 metal braces	2 metal braces	2 double fitting	2 single fitting
4 adjustable feet	2 adjustable feet	4 adjustable feet	2 adjustable feet	4 M8x50 screw	4 M8x50 screw
6 plug 30x40	3 plug 30x40	6 plug 30x40	3 plug 30x40	12 screw	6 screw
32 M6 screw	16 M6 screw	16 M6 screw	8 M6 screw		
32 screw washer	16 screw washer	16 screw cap	8 screw cap		
32 screw cap	16 screw cap	16 screw cap	8 screw cap		
24 cover plug	12 cover plug	12 cover plug	6 cover plug		
16 nut cover	8 nut cover	16 nut cover	8 nut cover		
8 M8x45 screw	4 M8x50 screw	8 M8x45 screw	4 M8x50 screw		
8 M8 locknut	4 M8 locknut	8 M8 locknut	4 M8 locknut		
		4 floor mounting	2 floor mounting		

## Assembly instructions

Two people are needed to assemble this product. Assemble the stand from left to right.

Tools needed: Screwdriver/chisel, Phillips and torx bits, assembly hammer and 2 block wrenches 13"

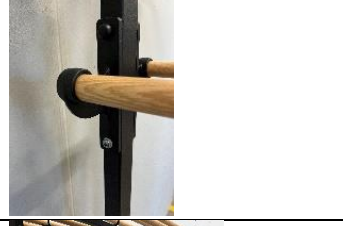1	Punch in the 30x40 plug into the ends of the stand and screw in the adjustable feet. If you have floor mounting, see the instructions for this.	
2	If you have a trellis, place the trellis on the floor and screw the fittings with the screws into the predefined holes on the trellis. the fittings are reversible and work in both directions.	
3	Assemble the trellis with a stand and the braces. Insert the M8 screws from the outside through the trellis fitting, stand and brace. Start with the bottom brace. The nut should be on the inside of the coat stand. Disregard trellis if this is not part of your solution.	
4	Continue with the stands and braces to the desired length. If the coat stand is also to end with a trellis, mount it in the same way as the first.	
5	Open the packaging for the purchased Nostalg hat/shoe rack or Hook strip or 291 hat rack. Start mounting the left brackets for the products on the stand with a screw washer and M6 screw. The cupped surface of the screw washer should be against the screw head. Don't forget the screw cap for hidden screw. Thread the anchor hook on any staff/bar and insert your staff/bar into the first bracket.	
6	Fit the next bracket by threading the staffs/bars into the bracket, then attach the bracket to the next stand as per point 5. If the next is a middle bracket, the staffs/bars should meet in the middle.	
7	Retighten the screw and nut that secures the braces properly. Cover both screw head and nut with nut cover. Press your cover plugs for the screw holes that do not have brackets.	
8	Tighten the set screws properly for the brackets and anchor hooks belonging to the racks and hook strips.	